


T. I. P. # 2

Application Rule of Thumb for all Graphic Film Installations

Only lay down and make contact with the amount of film to which you can apply high squeegee pressure.

While squeegeeing, work from center, out and the top, down.

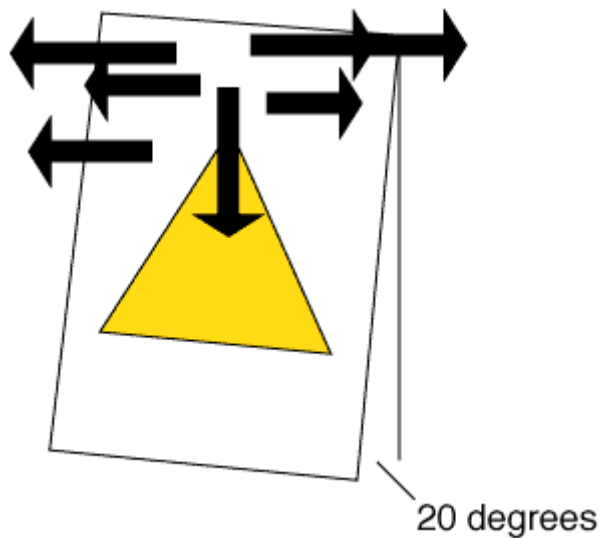

Air is easily trapped between the surfaces of the adhesive and sign surface. A signage installer who keeps an opening near the squeegee will find that the possibility of air entrapment is minimized.

A